

Drain Marking Instructions

Step by Step Instructions:

Getting Started ...

- Always work in groups, never alone.
- Wear your orange vest, so cars can see you.
- Wear gloves to protect your hands from adhesive
- Keep track of drains marked on the map provided.
- Only install markers when the ground is dry, otherwise they won't stick.
- Only mark in public ares, unless you have permission to work on private property.


Installing the Markers ...

1. Use a wire brush or broom to clean the area where the marker will be installed. Put all debris into the provided trash bag - do not sweep it down the drain!
2. Use the adhesive to follow the guide marks on the back of the marker, creating a spiral pattern.
3. Marker placement preferences:
 - On the curb with the writing facing the sidewalk, so it can be read by pedestrians.
 - Next to the drain on a flat surface, but never on the drain.
4. Carefully place the marker on the ground at the preferred location and press it down for 30 seconds. Don't worry if some adhesive seeps out the sides
5. Record the marker location on the map provided.

When You're Done ...

Return the supplies and the map of drains marked to Pierce Conservation District staff.

Remember Safety First!

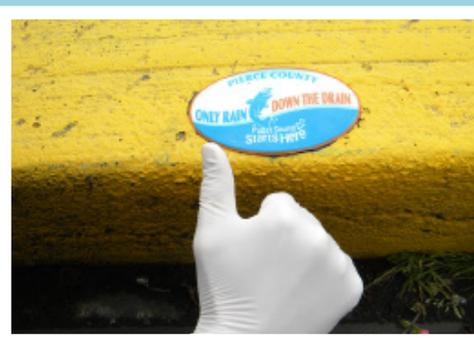

For more information contact:
Belinda Paterno 253-845-2973
belindap@piercecountycd.org



Pierce County
Public Works